

Robin IT Typos, it's late.

09138a5 on Apr 8, 2017

0 contributors

247 lines (143 sloc) 9.67 KB

How To: use 28 amp types.

Tested on:

- ✓ Firmware 1.0.2
- ✓ Katana-50 Combo
- ✓ Katana-100 Combo
- ✓ Katana Head

Contents

- [Introduction](#)
- [Sneaky Amps liveset](#)
- [3rd party software method](#)
 - [KATANAFxFloorBoard](#)
 - [Katana Editor for Android](#)
- [Manually editing Tone Studios .ts1 files](#)
- [SysEx MIDI messages method](#)

Introduction

The Boss Katana amp contains 28 amp types, of which only 5 are made available by default. These 28 amps appear to be the same as the Boss GT-100 pre-amps.

There's a few ways to select what I like to call **Sneaky Amps** and use them in your patches.


One of these amps is the CUSTOM amp, which lets you change a number of extra parameters to change how the amp behaves. Right now the easiest way to use this is through 3rd party software.

Heads up! Different amp types have different output volumes, even with the same GAIN & VOLUME settings. Test out new settings at a lower MASTER volume to avoid sudden loud noises.

Sneaky Amps liveset

One approach to use the Sneaky Amps that does not require any special software tinkering is using the Sneaky Amps liveset. It's a combination of all Sneaky Amps and separate entries with their BRIGHT setting enabled. Which makes a total of 30.

Download here [katana-dev/docs: SneakyAmpsBlank.zip](#)

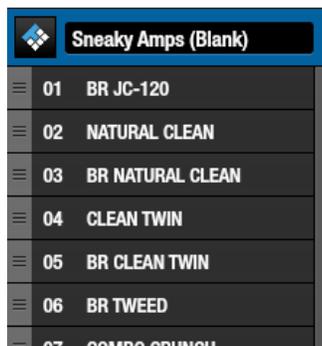

The "BR" prefix has the bright setting turned on.

The only Sneaky Amp that is excluded is the CUSTOM amp. This one is nice to try out when you have access to all the extra settings it comes with. If you want to test it, have a look at the 3rd party software.

Using the liveset

Unzip the liveset and import `SneakyAmpsBlank.ts1` in Boss Tone Studio.

The settings for each amp are the same and super boring. So either drag the amp you are interested in to a CH1-4 slot. Or click it to load the patch as a preview.

Do not use your AMP TYPE knob on the Katana or in Tone Studio. As this will change your amp to one of the default 5. Everything else is free game.

When you are done dialing in a tone you like, I would recommend using the **buttons on the amp** to save your tone to CH1-4. This is the most surefire way to save it. Sometimes Tone Studio forgets you are working with a Sneaky Amp and glitches out, but your Katana will not.

3rd party software method

3rd party software is still in the works. But the first experimental software is out there. [Submit an issue](#) if you know of software doing this that isn't listed yet.

KATANAFxFloorBoard

By Colin Willcocks (gumtownbassman@yahoo.com). The first application that allows setting all 27 Sneaky Amps since version 20170408.1 .

Windows download is available here: <https://sourceforge.net/projects/xfloorboard/files/experimental/> Which also works on Linux with Wine 2.1.

Connect your KATANA

At the time of writing, the application does not detect devices *after* starting the application. So make sure your KATANA is on and connected.

Install and open the application


You should get a full floorboard like this when done installing.



Select MIDI channel

Go to Settings > Preferences (Ctrl + P). You want to *at least* select Midi out here to be:

- For Windows use KATANA (not the DAW CTRL or CTRL ones).
- For Linux use KATANA - KATANA 1 (not 2 or 3).

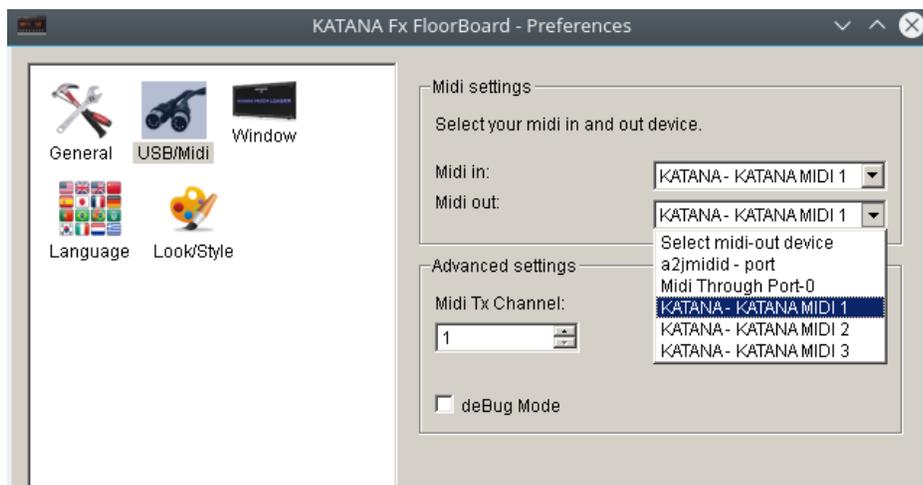

(Setting Midi in to be the same one may become relevant in future versions)

Change the right amp!

On the floorboard, locate the *correct* Sneaky Amp stompbox.



← The AMP pedal that has a green A on it.

There will also be a red B one, this isn't the one you want.

Lower master volume

This is where you want to lower the MASTER volume on your Katana if you haven't done so yet. Changing amp types will change the output volume. Test out new settings at a lower MASTER volume to avoid sudden loud noises.

Select a Sneaky Amp type

Click the type dropdown menu. As soon as you hover over a different amp type your Katana should switch to it **right away**. This will take around a second to do every time so try not to move too fast, or you could select the wrong amp.



For more info on each amp, check the [Amp Type table](#).

Custom amp

The CUSTOM amp has additional parameters that lets you create your own kind of amp model based off of some templates. To do this press the **right mouse button** on the type selector.



Not every parameter works, such as T-COMP and GAIN SW. But the others do, allowing for very interesting CUSTOM amp settings.

After this

Once you've set the Sneaky Amp type you like, don't move the Amp type knob on your Katana or Tone Studio. This will of course change your amp type back to one of the defaults.

Saving your Sneaky Amp to a TONE SETTING (CH1-4) **does work**. And you can use Tone Studio to import/export your tone, including Sneaky Amp.

Experimental release

Keep in mind this is an experimental release. Changing other settings may not work as intended.

Katana Editor for Android

By condor from VGuitarForums. Available as a zip attachment there: <http://www.vguitarforums.com/smf/index.php?topic=20234.msg148529#msg148529> Look for "KatanaEditor9.zip" it's easy to overlook the download.

As of version 9, you can select Sneaky Amps directly from the app.

Installing

Extract the .apk file from the zip. Transfer this file to your Android and install it. For example by using a file manager app.

wikiHow has a guide to help with this step. <http://www.wikihow.tech/Manually-Install-Android-Apps>

Connecting


You will need a USB On-The-Go (OTG) cable. With that, connect your Android directly to the Katana's USB port.

Your phone will ask you, which app to open this USB device with. Select KatanaEditor and give it any required permissions when asked.

At first all settings may show up incorrect. This is a known issue with the current version. Try to move some knobs on your Katana as well as sliders on the app until the app syncs and accurately shows what your amp settings are.

Long press Amp

Long press the Amp button to get a dropdown for all Sneaky Amps.

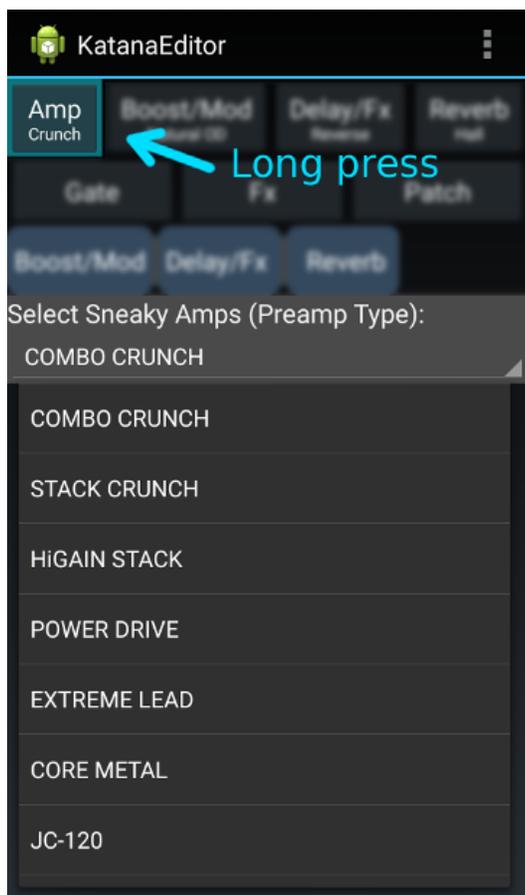

You should hear the effect right away when you pick a different amp.

Custom amp

Being able to edit the custom amp will be added soon™.

Manually editing Tone Studios .ts1 files

The .ts1 files are JSON formatted livesets you can in/export in Boss Tone Studio for Katana. By editing these files, you are able to choose any of the 27 amp types.

Export the Liveset you want to edit.




Note the position of the patch you want to edit. In our case it's the 3rd one.

Open the file in a text editor

Search for "preamp_a_type", it should have the same number of matches as there are patches in this liveset. Cycle through them until you find the one you want to edit. In our case the 3rd.

```
_shifter_ps1pre_dly_h":0,"preamp_a_type":6,"fx2_pitch_shifter_ps2fine":40,
```

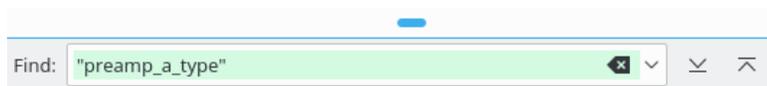

Replace the number using the table


Use the [Amp Type table](#) to find the Sneaky Amp you want to use.

For example, perhaps you want the DELUXE CRUNCH. In the table this is listed as:


TSL	SysEx	GT-100 Name	Katana LED
12	0x0C	DELUXE CRUNCH	Crunch

The TSL number 12 is the one you want to use.


```
_shifter_ps1pre_dly_h":0,"preamp_a_type":12,"fx2_pitch_shifter_ps2fine":40,
```

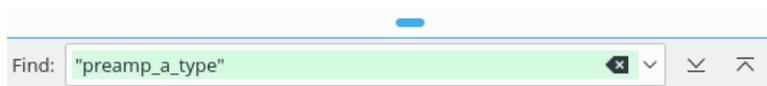

Save, import and drag

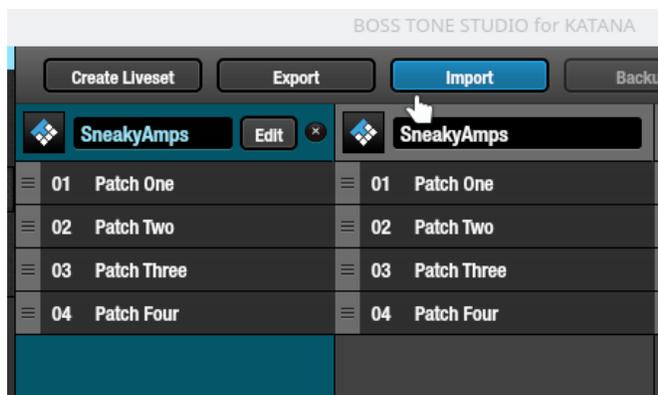

Importing your edited file will create a new entry in your librarian. The left one will be your edited version. Drag the edited patch "Patch Three" to any of your preset. For example CH3.

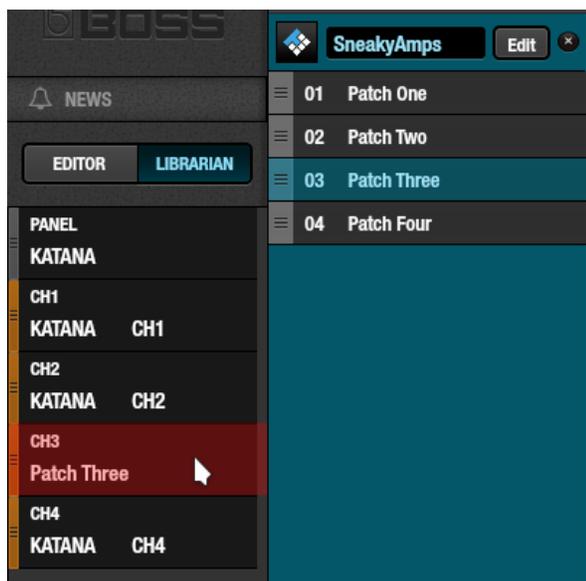

Now whenever you select CH3 it should load your patch with the DELUXE CRUNCH amp. And as the table indicates, the LED should light up at Crunch.

Validating

How do you know it's for real though?

Play some notes with your guitar on this setting. You will notice it's quite low-gain.

Now move the AMP TYPE knob to something else (CLEAN for example) and back to CRUNCH. This should revert the amp type back to the default (TWEED) which is much higher gain.

Switch between CH1 and CH3 so it loads your saved CH3. You will be back on the DELUXE CRUNCH.

SysEx MIDI messages method

This is a more advanced method, aimed at 3rd party software developers and knowledgeable hackers.

In this [Reverse Engineered SysEx specification by Steven Hirsch](#) you can find how to construct SysEx MIDI messages for the Katanas, along with python code that does so.

There are two addresses associated with the amp type you can write to over SysEx. Either address immediately switches the amp type of whichever TONE SETTING you are currently on (CH1-4 or PANEL).

Default Amps 0x00 0x00 0x04 0x20

This is what Tone Studio uses to write to and corresponds to the knob on your amp.

It's values are:

- 0x00 Acoustic
- 0x01 Clean
- 0x02 Crunch
- 0x03 Lead
- 0x04 Brown

Sneaky Amps 0x60 0x00 0x00 0x51

This is the address that takes the GT-100's values for pre-amps. It's values are between 0x00 and 0x1B . You can find the full list in the SysEx column of the [Amp Type table](#).